

ALPHA OM-5100 FINE PITCH SOLDER PASTE

DESCRIPTION

Cookson Electronics Assembly Material's ALPHA OM-5100, is a low residue, no-clean solder paste designed to maximize SMT line yields. The flux vehicle is rheologically formulated to provide excellent repeatability and resistance to environmental conditions. The ALPHA OM-5100 activation system has been optimized to enhance joint solderability, solderballs and other soldering defects while maintaining long term reliability, high value, broad latitude product that will help you accomplish these goals. Minimizing defects requires robust and repeatable processes, equipment and materials.

PROCESS BENEFITS & FEATURES

- **Quick start up** and simple product substitution from current material
- **Print Consistency:** Lower "deposit to deposit" variation drives maximisation of first pass print and reflow yields
- **Print Repeatability:** Lower variability after production dwells, ensuring a continuous production flow with minimized level of insufficient solder joints
- **Solder Ball Reduction:** Minimising both mid chip and random solder balls helps to maximise reflow yields
- **Excellent Solder Spread:** Compatibility with a variety of pad and lead finishes drives overall cosmetics and yields up!

ALPHA OM-5100 is suitable for fine pitch applications such as 0.5 mm (20mil) pitch Flip-Chip and 0201 assembly Excellent response to pause performance, generating less defects due to start up.

High print speed, up to 150 mm/sec (6 inch/sec) .

Efficient activation system providing defect free soldering with a wide range of oven profiles.

Low residue level with minimal spread for reliable underfilling processes and results.

Excellent solderballing characteristics

Excellent reliability properties, halide-free material

PRODUCT INFORMATION

Alloy: 62Sn/36Pb/2Ag and 63Sn/37Pb

Powder Size: Type 3, (25-45 μm per IPC J-STD-005).

Packaging Sizes: 500-Gram jars and 6" and 12" cartridges, ProFlow™ Cassettes.

APPLICATION

Formulated for both standard and fine pitch SMT stencil printing with apertures down to 0.3mm (12 mil) diameter and print speeds up to 150mm/sec (6"/sec) with standard stencil thickness of 0.1mm (4 mil) to 0.15mm (6 mil), particularly when used in conjunction with Cookson Electronics Assembly Materials' Stencils.

SAFETY

While the ALPHA OM-5100 flux system is not considered toxic, its use in typical reflow will generate a small amount of reaction and decomposition vapours. These vapors should be adequately exhausted from the work area. Consult the MSDS for additional safety information, and for toxicity data on alloys containing lead and silver.

STORAGE

ALPHA OM-5100 should be stored in a refrigerator upon receipt at 35 - 45°F (3-7°C). Permit paste to reach room temperature prior to opening. This will prevent condensation of moisture on the solder paste. Other storage conditions are shown on page 2.

ProFlow is a registered trademark of DEK. RheoPump is a registered trademark of Cookson Equipment Group, Hydrex™ is registered trademark of Petroferm.

The information contained herein is based on data considered accurate and is offered at no charge. No warranty is expressed or implied regarding the accuracy of this data. Liability is expressly disclaimed for any loss or injury arising out of the use of this information or the use of any materials designated.





ALPHA OM-5100 TECHNICAL DATA		
CATEGORY	RESULTS	PROCEDURES/REMARKS
CHEMICAL PROPERTIES		
Activity Level	REL-0 = J-STD Classification (Corrosivity Cu Mirror Pass (L))	IPC J-STD-004
Halide Content	Halide free (by titration). Passes Ag Chromate Test	IPC J-STD-004
Bono Testing	Pass (Corrosion and Residue)	Bono Testing Standard
ELECTRICAL PROPERTIES		
SIR (IPC 7 days @ 85° C/85% RH)	2.6 x 10 ⁹ ohms	Pass, IPC J-STD-004 {Pass = 1 x 10 ⁸ ohm min, uncleaned}
SIR (Bellcore 96 hours@35°C/85% RH)	1.9 x 10 ¹² ohms	Pass, Bellcore GR78-CORE{Pass = 1 x 10 ¹¹ ohm min}
Electromigration (Bellcore 500 hours @ 65°C/85% RH)	<i>initial</i> 1.4 x 10 ⁹ ohms, <i>final</i> 9.3 x 10 ⁹ ohms	Pass, Bellcore GR78-CORE 62Sn/36Pb/2Ag {Pass= final > initial/10}
PHYSICAL PROPERTIES		
Using 89.5% Metal, Type #3 Powder		
Flux Residue Cosmetics	Clear, Colorless Flux Residue.	63Sn/37Pb alloy
Tack Force vs. Humidity (24 hours)	Less than 1g/mm ² change at 25%,50% and 75% RH	IPC J-STD-005
Viscosity	90% metal load designated M13 is suitable for all typical stencil-printing applications.	Malcom Spiral Viscometer; J-STD-005
Solderball	Pass < 10 count (62Sn/36Pb/2Ag, 63Sn/37Pb alloy)	Pass IPC J-STD-005
Stencil Life	> 8 hours	@ 50%RH, 74°F (23°C)
Slump	Hot Slump & Cold Slump Pass	IPC J-STD-005
	Pass	DIN Standard 32 513, 5.3

ProFlow is a registered trademark of DEK. RheoPump is a registered trademark of Cookson Equipment Group, Hydrex™ is registered trademark of Petroferm.


The information contained herein is based on data considered accurate and is offered at no charge. No warranty is expressed or implied regarding the accuracy of this data. Liability is expressly disclaimed for any loss or injury arising out of the use of this information or the use of any materials designated.





ALPHA OM-5100 Processing Guidelines			
STORAGE-HANDLING	PRINTING	REFLOW (See Figure #1)	CLEANING
<ul style="list-style-type: none"> •Refrigerate to guarantee stability @ 3-7°C (35- 45 °F) •Shelf life of refrigerated paste is six months. •Required warm-up of paste container to room temperature for up to 8 hours. Paste must be room temperature before processing. Verify paste temperature is above 18°C (64°F) with a thermometer. Printing can be performed at temperatures up to 28°C (82°F). •Do not remove worked paste from stencil and mix with unused paste in jar. This will alter rheology of unused paste. 	<p>STENCIL: Recommend Cookson Electronics Assembly Material’s ALPHA CUT or ALPHA FORM stencils @ 0.1 mm (4 mil) to 0.15 mm (6 mil) thick</p> <p>SQUEEGEE: Metal.</p> <p>PRESSURE: 0.15 to 0.3 kg per cm (0.8-1.5 pounds per linear inch) of squeegee length.</p> <p>SPEED: 1 to 8 inches (25mm to 150 mm) per second.</p> <p>PASTE ROLL: 1.5-2.0 cm diameter and make additions when roll reaches 1 cm diameter. Maximum roll size will depend upon blade type.</p> <p>PRINT PUMP HEAD: ALPHA OM-5100 is suitable for use in both MPM RheoPump™ and DEK ProFlow™ systems.</p>	<p>ATMOSPHERE: Clean-dry air or nitrogen atmosphere.</p> <p>PROFILE (Sn 62 alloy): A straight ramp profile @ 0.8°C to 1.2°C per second ramp rate is recommended with a 30 to 90 sec TAL and 210 to 220°C peak. High density assemblies may require preheating as follows: -Ramp @ 60-120°C/min. to 140-160°C. -Dwell @ 140-160°C for 0-1.0 minutes. -Ramp @ 60-120°C/min to 210- 220°C peak -Time above 178°C=30-90 secs - Ramp down to R.T. @ 60-150°C/min.</p>	<ul style="list-style-type: none"> • ALPHA OM-5100 residue is designed to remain on the board after reflow. <p>Misprints and soft flux residues remaining after rework may be removed with ALPHA Electronic Cleaners Bioact™ SC-10 & SC-10E and Hydrex™ SP Aqueous cleaners available from Cookson Electronics Assembly Materials.</p>

Figure #1: Typical Reflow Profiles

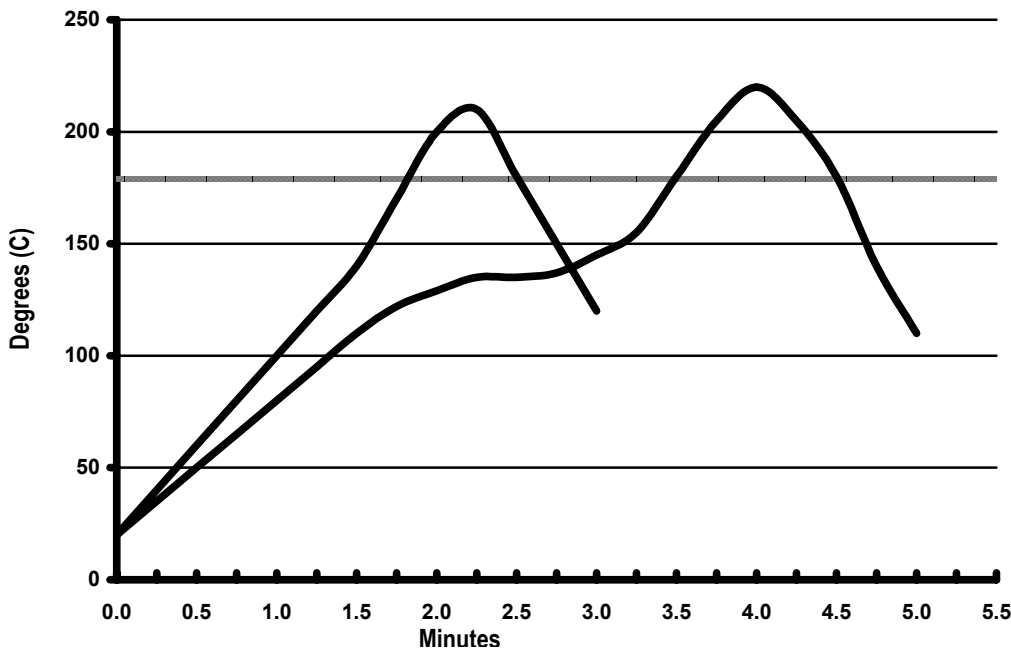

ProFlow is a registered trademark of DEK. RheoPump is a registered trademark of Cookson Equipment Group. Hydrex™ is registered trademark of Petroferm.

The information contained herein is based on data considered accurate and is offered at no charge. No warranty is expressed or implied regarding the accuracy of this data. Liability is expressly disclaimed for any loss or injury arising out of the use of this information or the use of any materials designated.

